

CROSSFIRE Instructions

Stand Alone Mode:

Press the menu button on the rear of the unit. Use the the up and down buttons until the display reads AU##. Then press the enter button and use the up and down buttons to select on of the 100 different auto mode functions. Press enter after you have selected a function to set it.

Sound Active Mode:

Press the menu button on the rear of the unit. Use the the up and down buttons until the display reads Sond. This will put the light into sound active mode.

For DMX Mode:

Press the menu button on the rear of the unit. Use the the up and down buttons until the display reads d####. Then set the light to the desired # in your DMX chain.

Channel #1- 0-127 Master dim (must be on/up for other functions to work.

128-206 Strobe fast - slow

207-248 Lens cycle (goes from lens to lens 1-4)

249-255 On

Channel #2- Lens #1 Pattern change speed

Channel #3- Lens #1 pattern choose

Channel #4- Lens #1 pattern cycle

Channel #5- Lens #2 Pattern change speed

Channel #6- Lens #2 pattern choose

Channel #7- Lens #2 pattern cycle

Channel #8- Lens #3 Pattern change speed

Channel #9- Lens #3 pattern choose

Channel #10- Lens #3 pattern cycle

Channel #11- Lens #4 Pattern change speed

Channel #12- Lens #4 pattern choose

Channel #13- Lens #4 pattern cycle