

# FS575DMX Instructions

## **Start up:**

Check dip switches make sure all are in the off position.

Make sure the on/off switch on the controller is in the on position.

Check to make sure the cable coming out of the controller is connected to the signal in connection on the light.

## **Controller:**

The switch in the top left marked NONE, RISE and FALL. These button controls the shade of white to make it look like sun rise and sun set and then plain white.

There are 3 sliders marked STROBE, APERTURE and COLOR.

Strobe- When this slider is all the way to the left it closes the shutter. To open it up the shutter bring the slider a 1/4 of the way to the right. after a 1/4 of the way the light strobos from slow to fast.

Aperture- This slider controls the size of the beam. from left to right (small to large)

Color- This slider will scroll through the colors and past half way the light will begin to a constant scroll.

There are 8 buttons at the bottom of the controller. 6 colors these will automatically scroll to that color. The two marked open and close are the shutter. press open to bring the light on and press close to black it out.

**\*\*\*Pressing close does not turn the bulb off\*\*\***

## **DMX:**

Make sure dip switch 10 is in the ON position. Connect the light to the board via DMX cable. This is a four channel DMX light.

Channel #1 0-75 On

76-255 Strobe fast to slow

Channel #2 0-255 Aperture small to large

Channel #3 0-35 No change in shade of white

36-71 Rise (give white a tint that resembles a sun rise)

72-255 Fall (give white a tint that resembles a sun set)

Channel #4 Colors