

JAGUAR Instructions

Instructions for Operation:

Sound Active Mode:

Put all dip switches in the "OFF" position

Automatic Mode:

Put dip switch #1 to the "ON" position. Dip switches #2 through #10 to the "OFF" position.

DMX Mode:

Dip switches #1 - #9 are for addressing DMX and dip switch #10 in the "ON" position tells the laser you want to run it DMX. If this is the first fixture in your DMX chain, set Dip Switches #1 and #10 to the "ON" position.

Channel #1

0-127 is blackout
128-255 is on

Channel #2

0-255 Patterns

Channel #3

0-63 No effect
64-127 pan rotation (rotates pattern on X axis)
128-191 tilt rotation (rotates pattern on Y axis)
192-255 pan & tilt rotation (rotates on both X & Y axes)

Combine with sliders 4 & 5 to produce your own specific pattern

Channel #4

0-127 no effect
128-255 Center rotation (moves pattern around a center point)

Combine with slider 3 & 5 to produce your own specific pattern

Channel #5

0-255 Speed (from slow to fast)

Combine with sliders 3 & 4 to produce your own specific pattern