

# **Kodiak Instruction Manual**

## **For version sold AFTER March 2013**

**2-Channel 750-watt DMX-512 strobe light, 1-15 flashes per second  
Dimming and speed control through DMX controller. Manual flash rate  
knobs can be adjusted through dip switches. XLR in & out jacks.  
Multiple strobes can be linked together with standard DMX cables.  
Clear lens can be colored with gel sheets. Size: 12.6 x 8.15 x 5.35  
Weight: 5.8 lb. Bulb: 153-BSTR750. Fuse: 20 mm 20 Amp. Strobes  
should not be run at full speed for longer that a few minutes.**

### **Sound Active Mode:**

**On the rear of the unit set all the dip switches to the off position and  
the strobe will react to sound.**

### **Auto Mode:**

**On the rear of the unit set dip switch #9 to the on position. Dip  
switches #1-4 control the speed (slow-fast).**

**Dip switch #1 slowest**

**Dip switch #2 medium slow**

**Dip switch #3 medium fast**

**Dip switch #4 Fast**

**Dip switches #1,2,3 and 4**

**Different combinations of dip switches 1-4 will give you different  
speeds.**

### **DMX Mode:**

**Set the fixtures DMX address using dip switches 1-9.**

**Channel #1 0-255 controls the flash speed**

**Channel #2 0-255 controls the brightness/dimming**