

Vulture Instructions

Instructions for Operation:

Auto and Sound Active Modes:

To choose modes, press the Esc button until the display reads one of these: nSta, nStc or SLAv. Then press enter to initiate the setting.

nSta- auto mode slow (moves slowly while changing gobos)

nSts- sound active mode (moves and changes with the beat of the music)

nStc- auto mode 2 (quick movement while changing gobos)

SLAv- slave setting for master/slave mode (see master/slave instructions)

DMX mode:

Press the Esc button until d001-d512 appears. Select your fixtures DMX address (ex. if it's your first fixture it would be d001) You also have a choice of 5 channel or 13 channel DMX. Press the Esc button until it reads 5ch or 13ch. Press enter after choosing your desired channel selection.

5 channel mode:

Channel #1

0-255 Pan

Channel #2

0-255 Tilt

Channel #3 Master Dim (must be up/on for colors and gobos to work)

0-7 Closed

8-134 100%-0%

135-239 Strobe (slow-fast)

240-255 Open

Channel #4 Color

0-7 No Function

8-21 White

22-35 Red

36-49 Green

50-63 Blue

64-77 Cyan

78-91 Magenta

92-105 Yellow

106-119 Purple

120-133 Orange

134-147 Chartreuse

148-161 Pink

162-175 Brown

176-189 Gold

190-203 Crimson

204-217 Violet
218-231 Crape
232-255 Color Scroll
Channel #5
0-7 Open
8-15 Gobo 1
16-23 Gobo 2
24-31 Gobo 3
32-39 Gobo 4
40-47 Gobo 5
48-55 Gobo 6
56-63 Gobo 7
64-71 Gobo 8
72-79 Gobo 9
80-94 Gobo 1 Shake
95-109 Gobo 2 Shake
110-124 Gobo 3 Shake
125-139 Gobo 4 Shake
140-154 Gobo 5 Shake
155-169 Gobo 6 Shake
170-184 Gobo 7 Shake
185-199 Gobo 8 Shake
200-214 Gobo 9 Shake
215-235 Clockwise Rotation
236-255 Counter Clockwise Rotation

13 Channel Mode

Channel #1
0-255 Pan
Channel #2
0-255 Fine pan
Channel #3
0-255 Tilt
Channel #4
0-255 Fine Tilt
Channel #5
0-255 Pan and tilt speed adjustment
Channel #6 Master Dim
0-7 Closed
8-134 100%-0%
135-239 Strobe (slow-fast)
240-255 Open
Channel #7
0-255 Red
Channel #8
0-255 Green

Channel #9

0-255 Blue

Channel #10 Preset Colors

0-7 No Color

8-21 White

22-35 Red

36-49 Green

50-63 Blue

64-77 Cyan

78-91 Magenta

92-105 Yellow

106-119 Purple

120-133 Orange

134-147 Chartreuse

148-161 Pink

162-175 Brown

176-189 Gold

190-203 Crimson

204-217 Violet

218-231 Carpe

232-255 Color Scroll

Channel #11 Color Change

0-255 fast-slow

Channel #12 Sound Active Function

0-255 Off-On

Channel #13

0-7 Open

8-15 Gobo 1

16-23 Gobo 2

24-31 Gobo 3

32-39 Gobo 4

40-47 Gobo 5

48-55 Gobo 6

56-63 Gobo 7

64-71 Gobo 8

72-79 Gobo 9

80-94 Gobo 1 Shake

95-109 Gobo 2 Shake

110-124 Gobo 3 Shake

125-139 Gobo 4 Shake

140-154 Gobo 5 Shake

155-169 Gobo 6 Shake

170-184 Gobo 7 Shake

185-199 Gobo 8 Shake

200-214 Gobo 9 Shake

215-235 Clockwise Rotation

236-255 Counter Clockwise Rotation

Master/Slave Mode:

Set the first fixture to a sound active or auto function using the Esc, Up and Down buttons. Then Connect the second fixture using a DMX cable. Set the second fixture to SLAv (see the modes in the Auto and Sound Active Modes section)